


Montage instructie
 Montage instructie
 Montage instructie
 Montage instructie



NL It is very important to insert the tube all the way inside the wall flange until it reaches completely the end of the internal slot, without leaving any gap.

EN It is very important to insert the tube all the way inside the wall flange until it reaches completely the end of the internal slot, without leaving any gap.

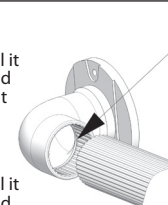

D It is very important to insert the tube all the way inside the wall flange until it reaches completely the end of the internal slot, without leaving any gap.

F It is very important to insert the tube all the way inside the wall flange until it reaches completely the end of the internal slot, without leaving any gap.

SecuCare Basic Vario 2

2 eindsteunen

2 eindsteunen

2 eindsteunen

1 koppelsteun



1 koppelsteun

1 koppelsteun

2 greepdelen van 51 cm

2 greepdelen van 51 cm

2 greepdelen van 51 cm

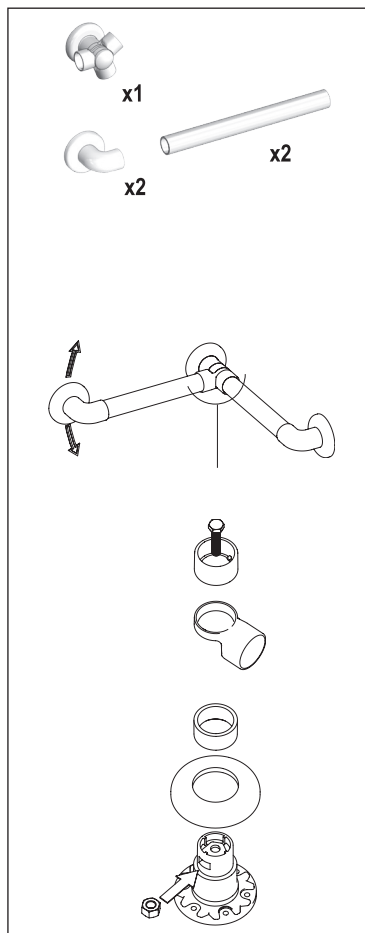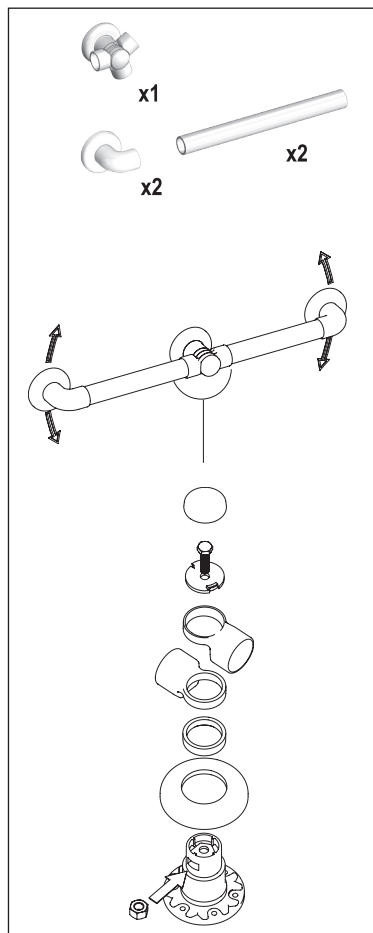

SecuCare Basic Vario 3

3 eindsteunen

3 eindsteunen

3 eindsteunen

1 koppelsteun

1 koppelsteun

1 koppelsteun

3 greepdelen van 51 cm

3 greepdelen van 51 cm

3 greepdelen van 51 cm

